



Take out



Sintel Systems

5/14/2011 AM 11:06



1 L



M

Menu Items

Frozen Yogurt
0.42

Bottle Water
1.50

| Qty | Product Name | Unit Price | Price |
|-----|--------------|------------|-------|
| | | | |

| | |
|-----------------|------|
| Surcharge | 0.00 |
| Delivery Charge | 0.00 |

| | |
|-------------------|-------------|
| Discount | 0.00 |
| Cash Discount | 0.00 |
| Sub Total | 0.00 |
| Tax | 0.00 |
| Amount Due | 0.00 |

↑ N

↓ 0

| Customer | Date Visited Count Visited | Point |
|----------|-------------------------------|-------|
| | | |



Navigation and Action Buttons:

- ↑ (Up Arrow)
- ↓ (Down Arrow)
- A** Close
- B** Void / Edit
- C** Qty
- D** Discount
- E** Last Receipt
- F** Cash
- G** Tender
- H** Order
- I** Credit Card

A – “Close” is used to cancel out and closes the transaction screen.

B – “Void / Edit” is used to void or edit current transactions.

C – “Qty” is used to change the quantity of an item being purchased.

D – “Discount” is used to apply a discount to a transaction.

E – “Last Receipt” is used to print the last receipt.

F – “Cash” is a shortcut used to tender cash.

G – “Tender” is used to accept payment and finish transactions.

H – “Order” is used to hold an order or retrieve a previously held order.

I – “Credit Card” is a shortcut to the Credit Card Processing screen.

J – This icon is used to select member customer.

K – This icon is used to switch cashiers.

L – This icon shows the number of customers.

M – “Kitchen Memo” is used to send a memo that will print in the kitchen.

N – “Up Arrow” is used to bring up the list of items being purchased.

O – “Down Arrow” is used to bring down the list of items being purchased.